


Pre-Installation Checklist:



Physical Installation:

- Ensure GO readers are **mounted at 54” to the bottom of the reader**. It is important that all readers are mounted at the same height and not installed on an angle.
- Ensure users will be able to stand directly in front of the reader at 3’ without being impeded by walls or other obstructions.
- Review the wiring diagrams to ensure proper cabling.

SYSTEM DIAGRAM: GO READER

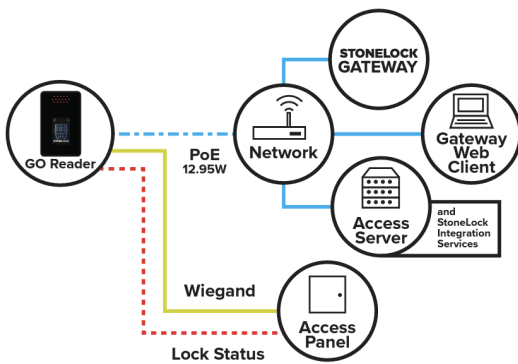

SYSTEM DIAGRAM: GO READER WITH READER EXPANSION MODULE

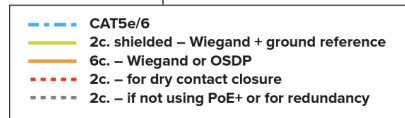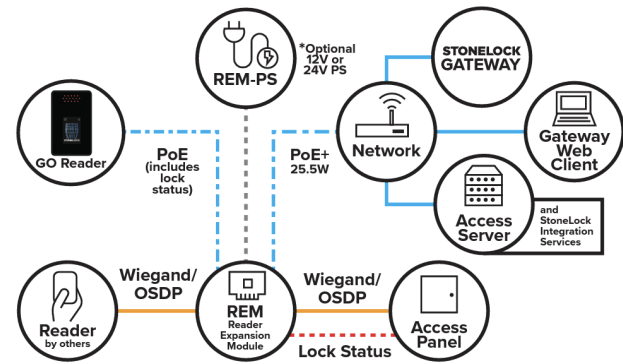

- Ensure no GO indoor readers are scheduled to be deployed outdoors.

Network Readiness:

- Reserve static IP addresses for each 1 GO or 1 GO/REM combo and 1 static IP for the StoneLock Gateway on the network.
- Provide port/network requirements to IT and ensure that these are applied.
- Request email server information if setting up email on the gateway *strongly recommended

[Link to the V3 GWY Network Requirements](#)

Integration Readiness:

- Ensure the 3rd party access control system integration is procured (purchased directly from the access control system provider). Check compatibility matrix for part numbers.
- Ensure the access control system is running a compatible version of integration. Check compatibility matrix.
- Create a dedicated, local login in for the access control system for StoneLock to use. (No Domain, Windows, or Active Directory accounts)

Link to integration matrix

GWY Readiness:

- If utilizing a GWY-HW, ensure you have a keyboard, monitor, and HDMI cable to run the initial configuration wizard.
- If running GWY-SW, ensure that you are running a compatible OS and that the hardware/VM meets the system requirements. Link to data sheet.
- Ensure you check the latest version of software and if available download.
- Ensure you know which card format or formats are being used. If you are using multiple card formats, ensure you know all of the card numbers for each range being used.